




Catalog #8123 and #8124  
Stainless Steel Fuel Line  
for Small Block and Big Block Chevy  
INSTALLATION INSTRUCTIONS

Please study these instructions carefully before installing your new stainless steel fuel line. If you have any questions or problems, please call our **Technical Hotline at: 1-800-416-8628**, 7:00 am to 5:00 pm, Monday - Friday, Pacific Standard Time or e-mail us at [edelbrock.edelbrock.com](mailto:edelbrock.edelbrock.com).

INSTALLATION PROCEDURE

1. Refer to the hose installation tip illustrations below.
2. Apply light coat of oil to threads of each fitting except pipe thread end of 90-degree fitting.
3. Apply pipe sealant tape or wet sealant to pipe thread on 90-degree fitting before installing fitting into fuel pump.
4. On the big block only, the 45-degree hose end connects to the filter at the end of the hard line.
5. The braided stainless steel hose must not make any contact with electrical wires. If the steel braided hose is routed near the alternator or any other electrical device, attention must be taken to ensure that all of the insulating boots and retainers, etc., are in place.
6. Tighten all connections and check each connection for leaks.

Hose Installation Tip

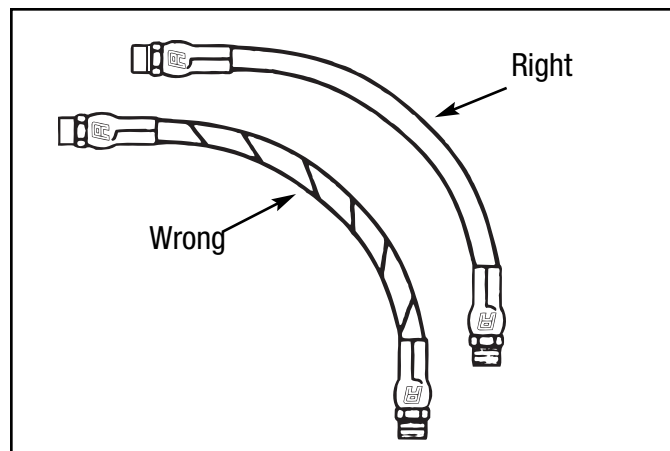

Avoid installing the hose in a twisted position. This can weaken your assembly and loosen fitting connections when under pressure.

**Edelbrock Corporation**  
2700 California St.  
Torrance, CA 90503  
Tech Line 1-800-416-8628  
E-Mail: [edelbrock@edelbrock.com](mailto:edelbrock@edelbrock.com)