



**UNIVERSAL CHEVROLET MOUNTING BRACKETS  
PART #8031 AND #8032  
INSTALLATION INSTRUCTIONS**

**PLEASE** study these instructions completely and thoroughly before installing your new throttle bracket. If you have any questions or problems, contact our **Technical Hotline** at: **1-800-416-8628**, 7 am - 5 pm Monday-Friday, Pacific Standard Time or e-mail us at [edelbrock@edelbrock.com](mailto:edelbrock@edelbrock.com)

KIT CONTENTS	
Qty.	Description
1	Throttle Bracket - Universal Chevy, Top
1	Throttle Bracket - Standard Chevy, Base
2	¼ - 20 lock nut
2	¼ - 20 x 5/8" bolt
4	¼" washer AN


**DESCRIPTION**

**PART #8031**

The #8031 is designed for small block or big block Chevy's. The bracket has the flexibility to provide proper cable adjustment for carbureted engines or fuel injected engines, with or without cruise control. Along with a transmission kick-down cable mount location for all transmission combinations. Below is the most common assembly.

- A- Cruise control
- B- Throttle cable
- C- Transmission kickdown cable

The bracket can be trimmed along the dotted line if necessary for vehicles with vacuum cruise control.

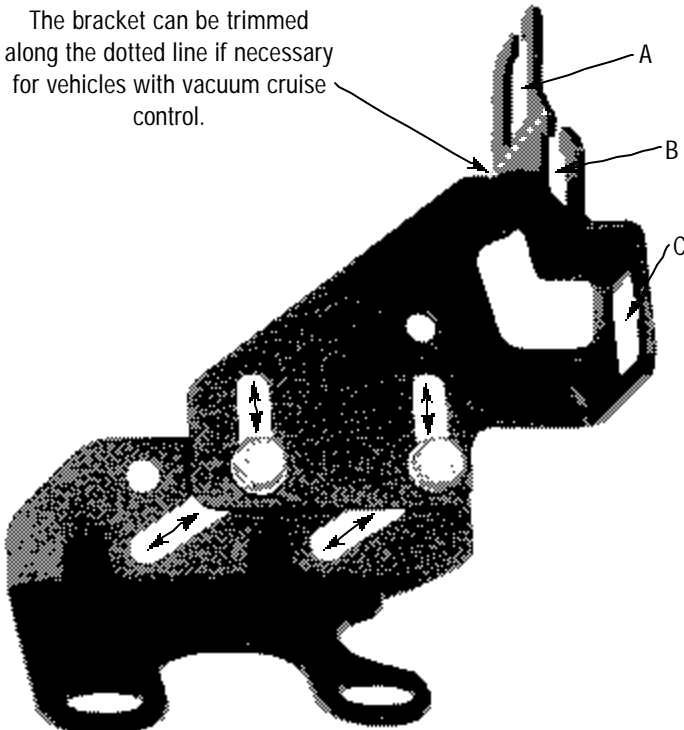

**PART #8032**

The #8032 is designed for small block Chevy's with E-Tec or Vortec style heads.

1. When using Edelbrock fuel injection, assemble the bracket as seen below.
  2. If you are using a carburetor, assemble the bracket as seen below left (#8031).
- A- Cruise control
  - B- Throttle cable
  - C- Transmission kickdown cable

The bracket can be trimmed along the dotted line if necessary for vehicles with vacuum cruise control.

