

**Catalog #8125
Stainless Steel Fuel Line
for Small Block Ford**


INSTALLATION INSTRUCTIONS

Please study these instructions carefully before installing your new stainless steel fuel line. If you have any questions or problems, please call our **Technical Hotline at: 1-800-416-8628**, 7:00 am to 5:00 pm, Monday - Friday, Pacific Standard Time or e-mail us at edelbrock.edelbrock.com.

NOTE: This kit is designed for use with Edelbrock fuel pump part #1725 with the addition of the bottom feed plate kit, part #1797.


INSTALLATION PROCEDURE

1. The pump body when installed on the engine should be clocked with the inlet towards the front of the car as shown below.
2. Refer to the hose installation tip illustrations below.
3. Apply light coat of oil to threads of each fitting except pipe thread end of adapter that installs into fuel pump bottom plate.
4. Apply pipe sealant tape or wet sealant to pipe thread on adapter fitting before installing fitting into pump bottom plate.
5. The braided stainless steel hose must not make any contact with electrical wires. If the steel braided hose is routed near the alternator or any other electrical device, attention must be taken to ensure that all of the insulating boots and retainers, etc., are in place.
6. Tighten all connections and check each connection for leaks.

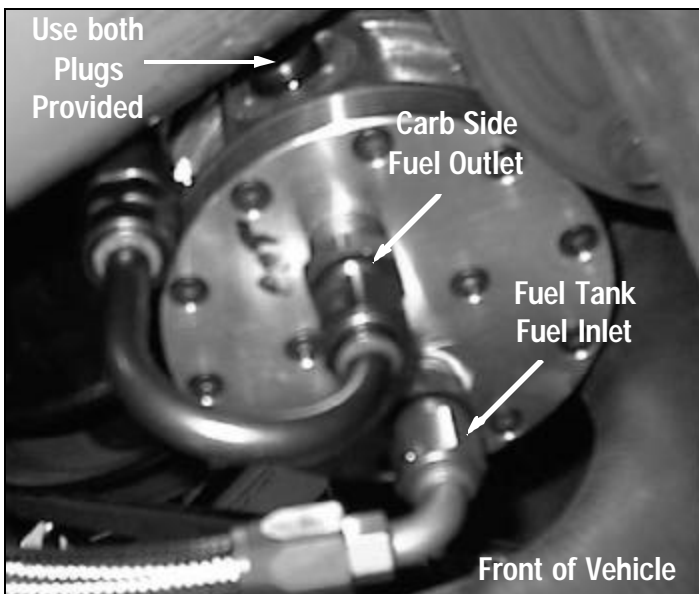

Pump Inlet Position

Hose Installation Tip

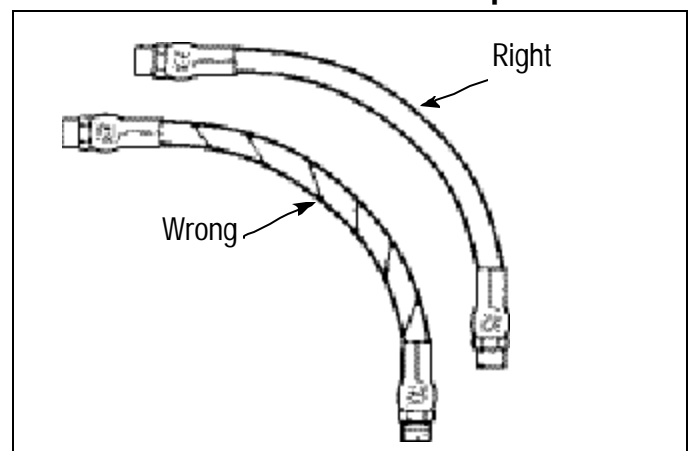

Avoid installing the hose in a twisted position. This can weaken your assembly and loosen fitting connections when under pressure.

**Edelbrock Corporation
2700 California St.
Torrance, CA 90503
Tech Line 1-800-416-8628
E-Mail: edelbrock@edelbrock.com**